



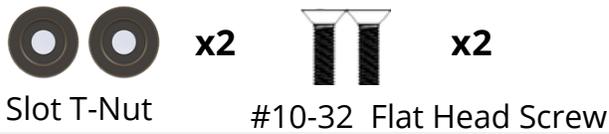

Magazine Mounted Pistol Holder

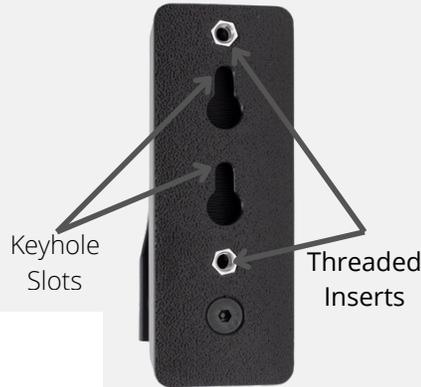

Part Number

TGW-MM-9-RH, TGW-MM-9-LH
TGW-MM-9S-RH, TGW-MM-9S-LH
TGW-MM-40-RH, TGW-MM-40-LH
TGW-MM-45-RH, TGW-MM-45-LH

Tools Required

Slat Wall Mounting: Wall Mounting:

- Allen Wrench
- Drill
- Hammer
- Level

Adjustable Mount Positions

6 mounting positions to achieve your preferred orientation and angle:

- 3 positions with the body horizontal
- 3 positions with the body vertical

Mounting Options

Option 1: Assault Wall Slat Wall Mounting

1. Locate the included mounting hardware.
2. Insert each screw into a T-nut, ensuring the screw head sits flush inside the T-nut.
3. On the back of the mount, locate the pre-installed silver threaded inserts.
4. Thread the screw/T-nut assemblies by hand into the silver inserts.
5. Using an Allen wrench, tighten until:
 - The back of the T-nut sits flush against the mount
 - The T-nut no longer rocks or spins freely
 - ⚠ Do not overtighten.
6. From the edge of the panel—or through an accessory access cutouts if multiple panels are installed—slide the assembled mount into your desired position on the Assault Wall panel.
7. To hang your weapon:
 - Remove the magazine from your firearm
 - Insert the magazine well onto the mount

Option 2: Direct Wall Mounting (supplied hardware won't be needed)

1. Position your screws so the heads contact the upper portion of the mount's built-in keyhole slots.
2. Mark your mounting locations on the wall.
3. If no wall stud is available, install your preferred drywall anchors at the marked locations.
4. Install your user-supplied screws into the wall studs or anchors, leaving the screw heads slightly standing off of the wall.
5. Slide the mount onto the installed screws until fully seated.
6. Hang your weapon by removing the magazine and placing the firearm onto the mount.

To Adjust the Mount Angle:

1. Remove the pre-installed flange bolt from the mount.
2. Pull the magazine profile insert out of the rectangular mount body.
3. Align the magazine profile to your desired position.
4. Press the two mount pieces back together.
5. Reinstall and tighten the flange bolt that was previously removed. ⚠ Do Not Overtighten

