



Spring Popper Target

1. Attach the Feet to the Base Plate: FIG 1.

- Bolt the thicker foot onto the base plate on the side with the holes.
- Bolt the thinner foot onto the base plate on the side farthest from the holes.

2. Attach the Brackets:

- Take the bracket with three slots and bolt it to the back of the target, with the three slots facing toward the top of the target.

FIG 2.

- Take the bracket with one slot and bolt it to the base plate, with the slot facing away from the front (thicker) foot.

FIG 3.

3. Assemble the Target to the Base:

- Place the target upright and line up the holes in the bracket on the target with the holes in the bracket on the base plate.

FIG 4.

4. Install the Spring:

- Slide the spring into the aligned slots of the two brackets. (The three-slot bracket on the target side allows you to adjust the spring tension and the target's reset speed.)

FIG 4 & 5.

5. Secure with the Pin:

- Insert the pin through both brackets and the spring to secure the assembly.

FIG 5.

Part Number

PT-SP-12

PT-SP-16

PT-SP-PD

Tools Required

- 1/2" Socket
- 3/4" Socket

FIG 4.

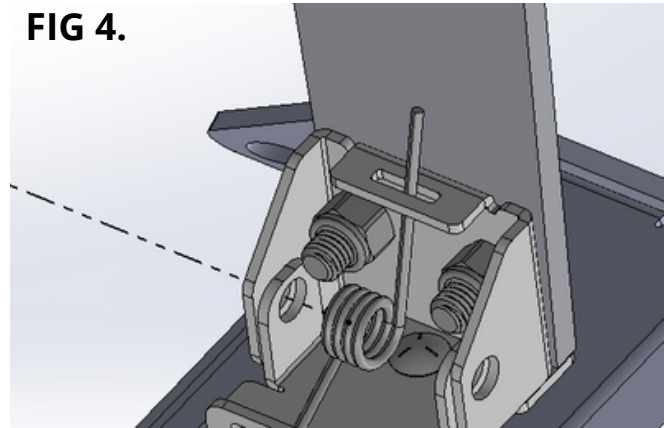


FIG 5.



FIG 3.



FIG 1.

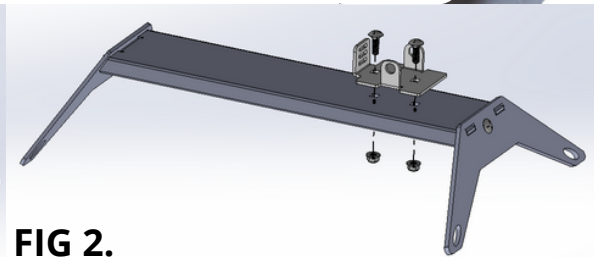


FIG 2.

