

Instructions



DOUBLE TAP_{inc}

STRONGHOLD PANORAMIC LEVELLING HEAD



Part Number

TRI-L



Fig. 2



Fig. 3

Installing the Leveling Head

1. Locate the top of the Tripod, and remove the bowl plate by loosening the adjustable lock lever and then pushing in the bowl quick release button ball. As shown in Fig 2 above
2. Place the leveling head over the mounting hole, aligning the center opening, and insert it, you will need to push the bowl quick release button in again to get it to lock into place, and then tighten the adjustable lock lever knob.
3. Do not overtighten—proper operation requires smooth movement, but the bowl ring should not spin in the tripod.

Leveling Head Adjustment

The leveling head uses a pivot system to give you micro-adjustment control in all directions.

1. Loosen the twist-lock grab handle slightly. As shown above in Fig 1.
2. Tilt the head left or right until the top plate is level.
3. Retighten the twist-lock grab handle until the leveling head is tight again.

Picatinny/Arca Tightness Adjustment

To adjust how tight your arca or picatinny rail sits inside the leveling head, is a quick adjustment.

1. Make sure the Rail Locking lever is in the unlocked position. As shown in Fig 1.
2. Push in and hold the Rail locking lever, the tension adjustment knob should push outward. As shown in Fig 3.
3. Using the Tension adjustment knob, rotate clockwise to tighten and counter clockwise to loosen.
4. Release the rail locking lever.

Note: If you need tools do adjust this you are doing something incorrect, STOP and call us!

Contact Us



Still Have Questions?

sales@doubletapind.com



812-274-4130



www.doubletapind.com