




Assault Wall Shelf – 15" & 30"

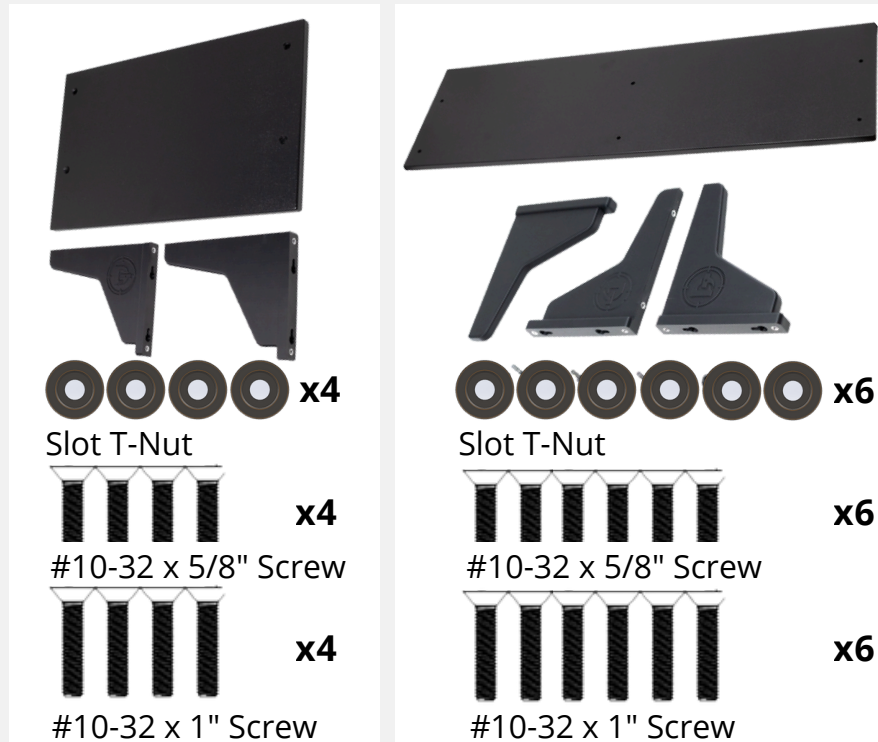


Part Number

TGW-SH-15, TGW-SH-30

Tools Required

Slat Wall Mounting: Wall Mounting:

- Allen Wrench
- Allen Wrench
- Drill
- Hammer
- Level

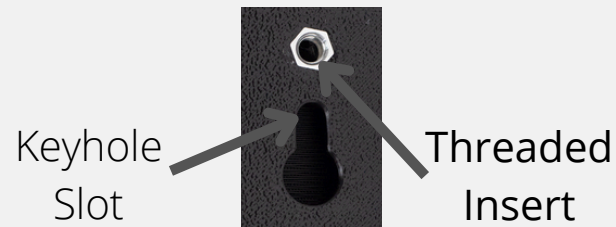

Mounting Options

Option 1: Assault Wall Slat Wall Mounting

1. Locate the included mounting hardware.
2. Insert each 5/8" screw into a T-nut, ensuring the screw head sits flush inside the T-nut.
3. On the back of the mount, locate the pre-installed silver threaded inserts.
4. Thread the screw/T-nut assemblies by hand into the silver inserts.
5. Using an Allen wrench, tighten until:
 - The back of the T-nut sits flush against the mount
 - The T-nut no longer rocks or spins freely
 - ⚠ Do not overtighten.
6. From the edge of the panel—or via an accessory access cutouts (if multiple panels installed), slide the assembled shelf supports into your desired position on the Assault Wall panel.
7. Use the remaining 1" flat head screws to attach the shelf onto the shelf supports. Remember not to overtighten.

Option 2: Direct Wall Mounting (some supplied hardware won't be needed)

1. Use the provided 1" flat head screws to attach the shelf supports to the shelf itself. Positioning the logos to face the outside of the shelf. ⚠ Do not overtighten hardware.
2. Position your screws so the heads contact the upper portion of the mount's built-in keyhole slots.
3. Mark your mounting locations on the wall.
4. If no wall stud is available, install your preferred drywall anchors at the marked locations.
5. Install your user-supplied screws into the wall studs or anchors, leaving the screw heads slightly standing off of the wall.
6. Slide the shelf onto the installed screws until fully seated.

