




Multi-Pistol Mount

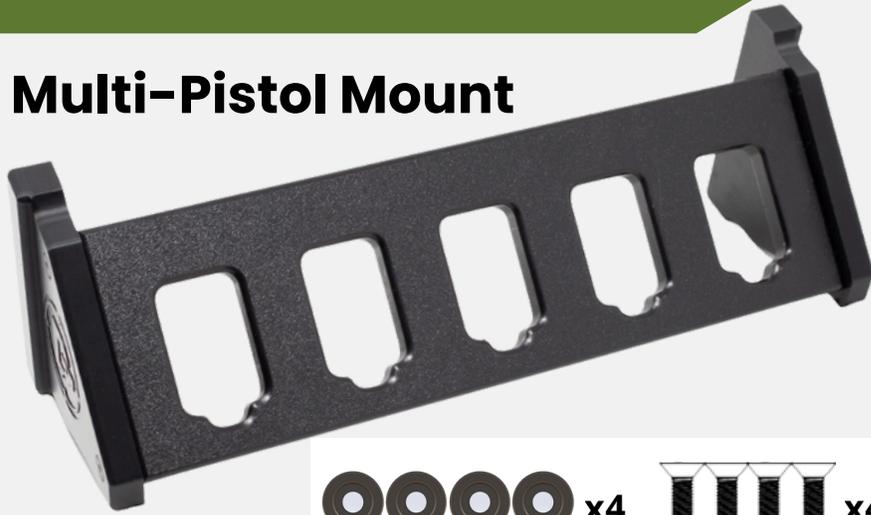


Part Number

TGW-PGR

Tools Required

Slat Wall Mounting: Wall Mounting:

- Allen Wrench
- Allen Wrench
- Drill
- Hammer
- Level

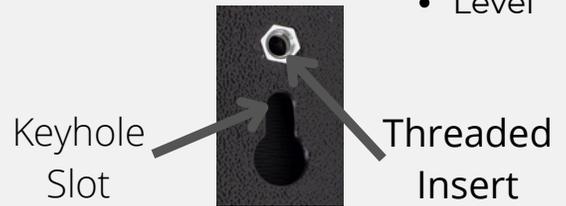

Mounting Options

Option 1: Assault Wall Slat Wall Mounting

1. Locate the included mounting hardware.
2. Insert each screw into a T-nut, ensuring the screw head sits flush inside the T-nut.
3. On the back of the mount, locate the pre-installed silver threaded inserts.
4. Thread the screw/T-nut assemblies by hand into the silver inserts.
5. Using an Allen wrench, tighten until:
 - The back of the T-nut sits flush against the mount
 - The T-nut no longer rocks or spins freely
 - ⚠ Do not overtighten.
6. From the edge of the panel—or through an accessory access cutouts if multiple panels are installed—slide the assembled mount into your desired position on the Assault Wall panel.
7. Insert each pistol barrel-first into the mount, positioning them either vertically or horizontally. Barrel length and weight distribution may determine the mounting orientation.

Option 2: Direct Wall Mounting (supplied hardware won't be needed)

1. Position your screws so the heads contact the upper portion of the mount's built-in keyhole slots.
2. Mark your mounting locations on the wall.
3. If no wall stud is available, install your preferred drywall anchors at the marked locations.
4. Install your user-supplied screws into the wall studs or anchors, leaving the screw heads slightly standing off of the wall.
5. Slide the mount onto the installed screws until fully seated.
6. Insert each pistol barrel-first into the mount, positioning them either vertically or horizontally. Barrel length and weight distribution may determine the mounting orientation.

