




Tactical Gear Hanger



Slot T-Nut

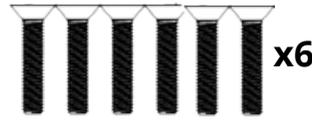

#10-32 x 1" Flat Head Screw

Part Number

TGW-TGM

Tools Required

- Allen Wrench

Steps:

1. Use two of the flat head screws provided to attach the hanger to the support brackets. The screw heads should sit flush with the face of the hanger.
2. Insert the remaining (4) 1" screw into a T-nut, ensuring the screw head sits flush inside the T-nut.
3. Locate the flat square mount, thread the screw/T-nut assemblies by hand into the silver inserts on the gusset/hanger to the flat square mount.
4. Using an Allen wrench, tighten until:
 - The back of the T-nut sits flush against the mount
 - The T-nut no longer rocks or spins freely
 - ⚠ Do not overtighten.
5. **Optional:** Helmet Mount Installation
 - Insert the carbon fiber rod into the flat round plate.
 - Press the opposite end of the carbon fiber rod into the top of the hanger until fully seated.
 - Secure each end of the rod with super glue if desired.
6. From the edge of the panel—or via an accessory access cutouts (if multiple panels installed), slide the assembled mount into your desired position on the Assault Wall panel.

